MODEL No.:SS1106

Wireless TV Speaker

Assistive Listening Device

Applicable to lift chair,sofa,etc.

(For Home&Personal Use)

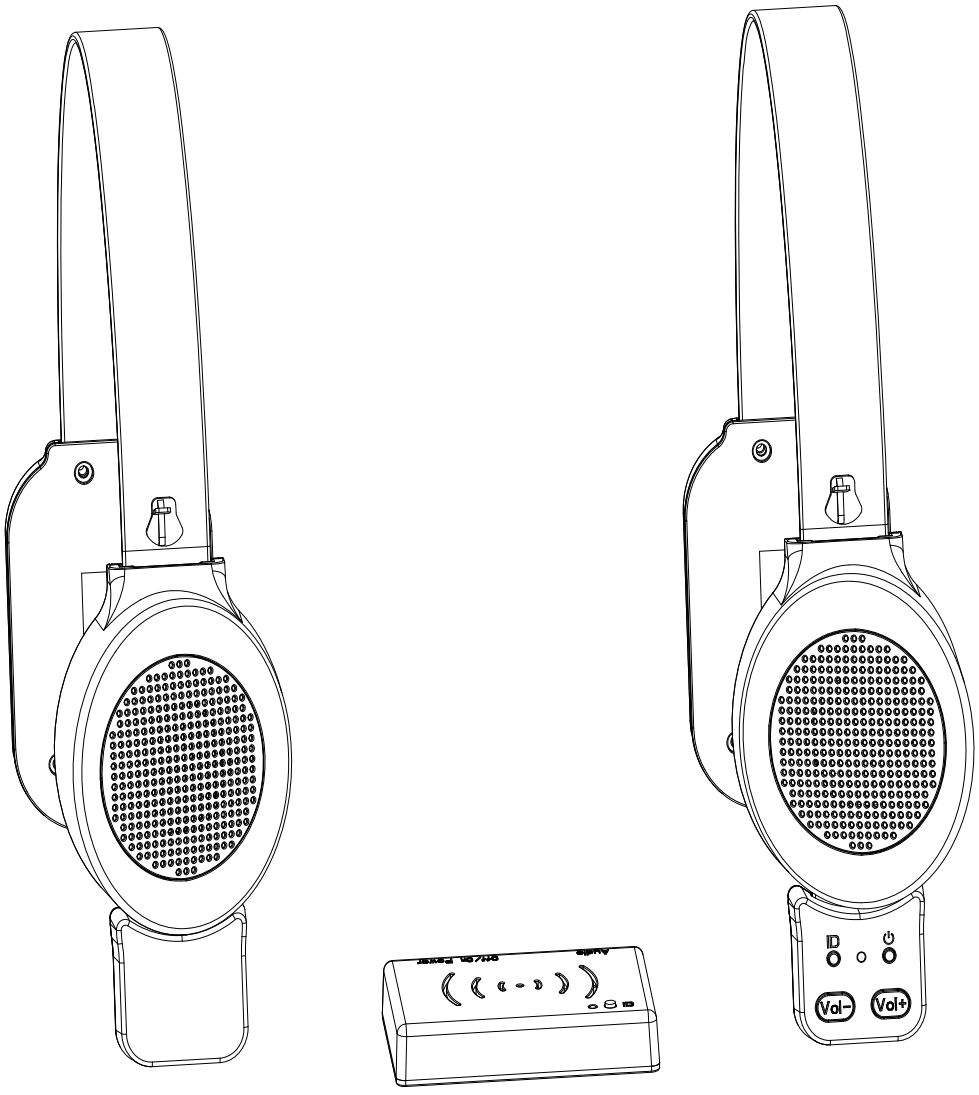

USER MANUAL

INTRODUCTION

The Wireless TV Speaker is designed for those hard-of-hearing or people who want to have their own volume level while watching TV.It adopts 2.4GHz wireless technology that convert crystal clear TV sounds to user without wearing uncomfortable headphones,to avoid letting the user being isolated to surrounding environment or distrubing others while enjoying the TV shows.

To maximize your product's life-span,please read and follow the instructions carefully before using.

A.CONTENTS

1.One transmitter
2.Two speakers(left&right)
3.Two AC adapter(DC 6V 1000mA)
4.One 3.5mm to 3.5mm audio cable
5.One 3.5mm female to 2RCA audio cable
6.One User manual

B.FEATURES

1.2.4GHz wireless technology
2.Personal volume control
3.Get rid of burdened headphones
4.Adjustable speaker height
5.Separate Left&Rright speaker for different location
6.Hearing TV without filling the room with sound
7.Easy installation, applicable to sofa/head of bed
8.No longer isolated from surrounding environment
9.Compatible with various TV and audio sources

C.COMPONENTS IDENTIFICATION

1.TRANSMITTER

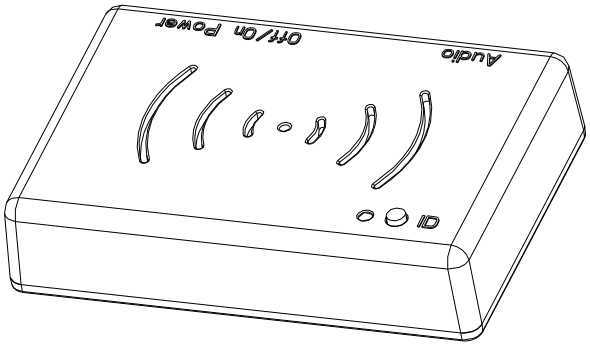

(FRONT)

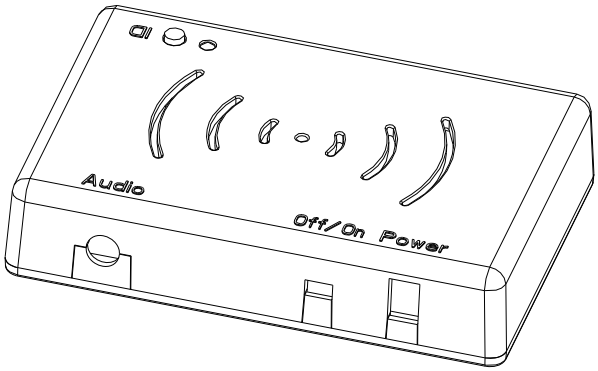

(REAR)

2.RECEIVER

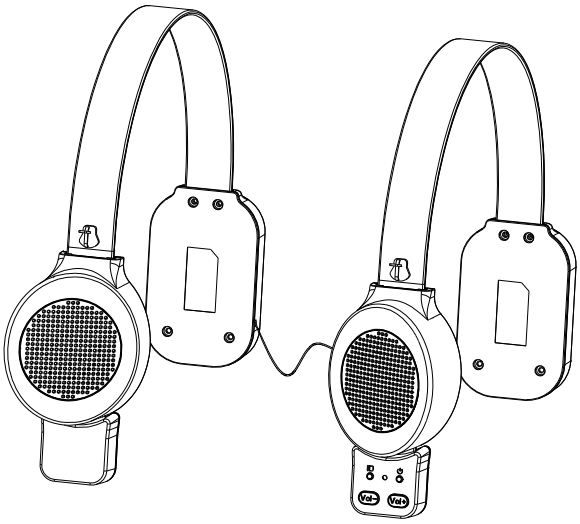

(FRONT)

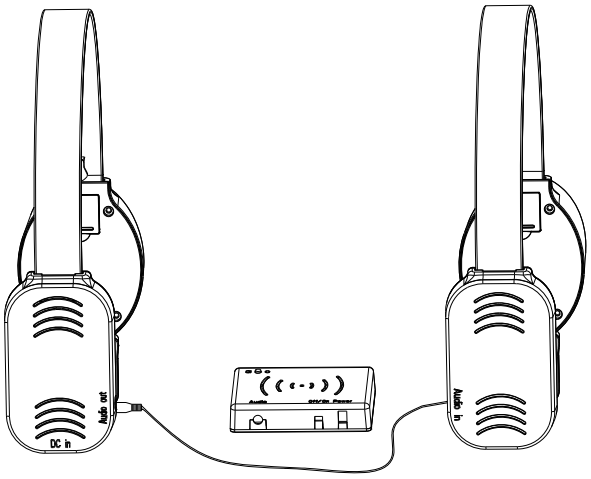

(REAR)

D.INSTALLATION

1.TRANSMITTER

A.Connect one of the supplied AC power adapter to a power outlet.

B.Plug the AC power adapter in the "e" DC in jack which located on the rear of the transmitter.

C.Connect your TV or any audio sources with Dual 3.5mm audio cable or 2RCA audio cable supplied in package,and another end to "c" the audio jack on rear of the transmitter.

D.Turn on "d" the transmitter on/off switch and "a" the transmitter power indicator will turn up in Red.When the audio cable has been connected,turn on the audio sources to at least the mid range level to play.

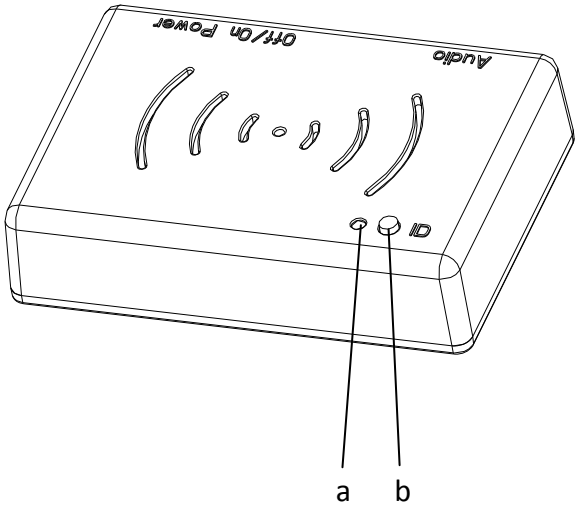

a.Transmitter power indicator
b.ID matching
c.Audio in
d.Transmitter On/Off switch
e.6V DC

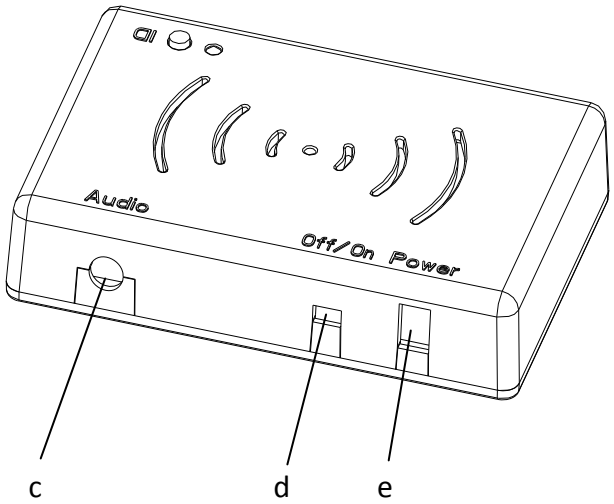

2.RECEIVER

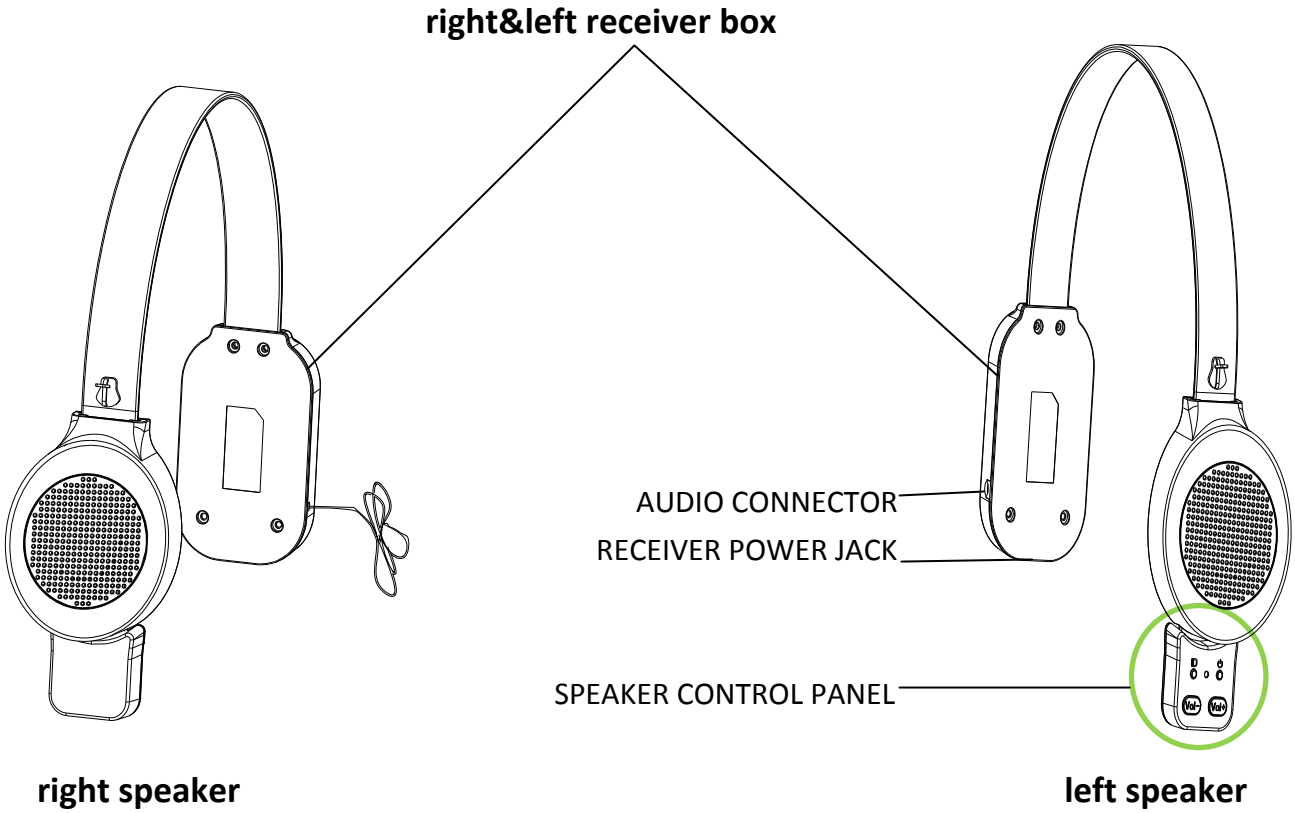
right&left receiver box
AUDIO CONNECTOR
RECEIVER POWER JACK
SPEAKER CONTROL PANEL
Vol-
Vol+
right speaker
left speaker

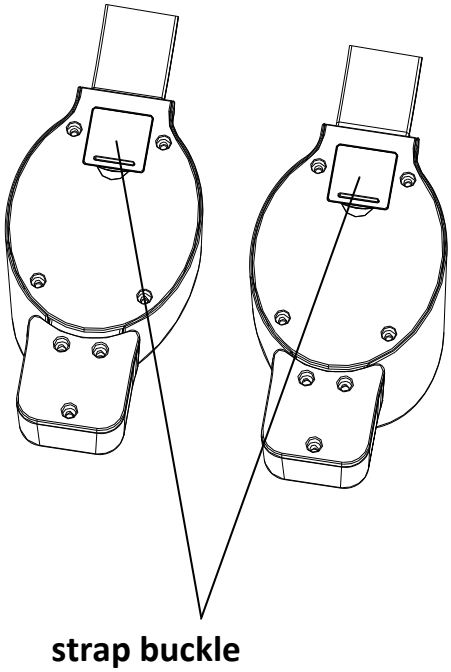
strap buckle

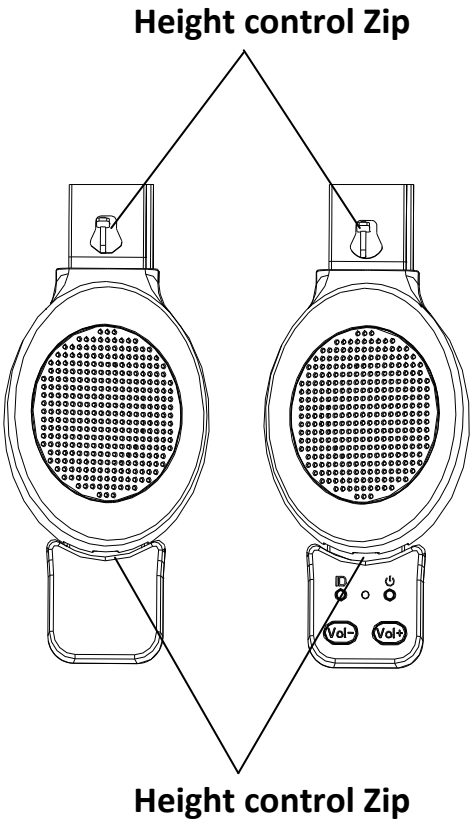
Height control Zip
Vol-
Vol+
Height control Zip

1.Place the left and right speakers on your chair,couch,or sofa.

2.Bend the strap of the speaker to form the shape of your chair,couch or sofa.Keep the receiver box behind the chair to hold the speakers in place.

3.Unbuckle the strap buckle on rear of two speaker,then adjust the UP/DOWN zip for different speaker height.Up the buckle back.

4.Plug the audio cord that comes from the right speaker into the audio in jack of the left speaker receiver box.

5.Plug the second power adapter into a power outlet.and another end into the receiver power jack that locates on the left speaker receiver box.

E.SPEAKER CONTROL PANEL OPERATION

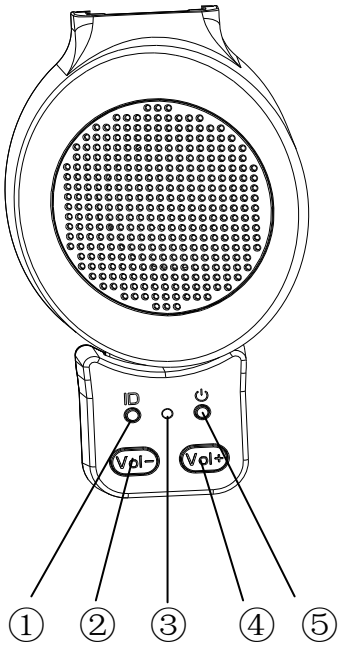

Speaker Control Panel

①ID matching

②Volume-

③Speaker Power indicator

④Volume+

⑤Speaker On/Off

1.Press ⑤ the speaker ON/OFF button to turn on the speakers， and ③ the power indicator will light up in Red， and blink slowly.

2.When the connected audio source(TV,Radio,MP3,DVD etc.)is turned on,the power indicator on both transmitter and receiver should stay lit without blinking, which means the wireless signal is being transmitted and received.

3.Press ②/④ the volume -/+ button to adjust the speaker volume.The speaker power indicator will blink fast when Min./Max. volume achieved.

4.When u are using this system for the first time, or if there have disconnection of signal or interferrence from other devices, re-matching the system by long press the ID matching button ("b" on transmitter and "① "on speaker control panel)for 3-4 seconds ,both the transmitter and speakers' power indicator will blink slow,and speakers should beep continuously;when wireless signal is matched, both the transmitter and speakers' power indicator will blink fast,then speakers will keep long beeping for 3-4 seconds before turned to normal working status.

5.When above steps have completed, your wireless TV speaker system should be ready to work.

F.TROUBLE SHOOTING

NO SOUND?

>The TV sound is "mute".The system can not work in TV mute mode.Keep at least a few volume of the TV,and adjust the receiver volume.

>Make sure the transmitter and receiver are on.

>Check if connected audio equipment is not playing.Start playing the equipment.

>Make sure the connected audio equipment is ON and its volume is set to at least 50%.

>The volume of receiver is too low,adjust the volume to an appropriate level.Turn up your audio source equipment's volume.

SOUND FROM ONLY ONE SPEAKER?

>Make sure the audio cord coming from right speaker has plugged into the left speaker completely.

DISTORTION?

>Check the coonection of the audio cord.

>Ensure the volume level of system is adjusted properly.

>The input level of the audio signal is too low.Turn up the volume of the audio source equipment.

>There may have interference from another wireless device in close proximity.Use the ID matching function on system to relocate the wireless signal.

G.CARE AND MAINTAINENCE

Any improper use may damage the unit and affect its functions.To best protect and care for this wireless TV speaker system,please read the following tips before using:

1.Keep the transmitter and receiver away from direct sun exposure.

2.Unplug the transmitter and receiver if not in use.

3.Use a slightly damp cloth to clear the outside of the unit.Avoid letting any liquids into the system.

4.Keep it our reach of the children.It may damage when a sudden drop down occures.

H.TECHNICAL SPECIFICATIONS

Modulation	:RF,stereo
Carrier Frequency	:2.4GHz
Frequency Response	:20-20KHz
Distortion	:Less than 1%
S/N Ratio	:90dB
Operating Distance	:>16m in open area
Operation Voltage	:Transmitter,DC 6V 1000mA adapter(incl.)
	:Speaker,DC 6V 1000mA adapter(incl.)
Transmitter Base	:53g
Left &Right Speaker	:560g